

7 Kg + xx kg = **Max. 75 kg**

3 Kg

80 130 40 0 km/h

80 130 40 0 km/h

544 596 588



- GB** Fitting instructions
D Montageanleitung
F Instructions de montage
NL Montage-instructies
I Istruzioni per il montaggio
E Instrucciones de montaje
PT Instruções de Montagem
S Monteringsanvisning
FIN Asennusohje
EST Paigaldusjuhend
LAT Stiprināšanas instrukcija
LIT Pritvirtinimo instrukcijos
PL Instrukcja montażu
RU Инструкции по установке
CZ Návod na montáž
SK Návod na montáž
SLO Navodila za pritrdjevanje
HR Uputa za sastavljanje
HU A felszerelés módja
GR Οδηγίες συναρμολόγησης
TR Montaj talimatları
中文 安装说明
日本語 取扱(取付)説明書
한국어 장작 지침
ไทย คำแนะนำการติดตั้ง

- DAEWOO Lanos, 4-dr Sedan, 97-03**
DAEWOO Lanos, 5-dr Hatchback, 97-03
DAEWOO Lanos, 3-dr Hatchback, 98-03
DAEWOO Leganza, 4-dr Sedan, 97
DAEWOO Nubira, 4-dr Sedan, 97-99
DAEWOO Nubira II, 4-dr Sedan, 00-02

**RAPID
SYSTEM**

Kit 1107

 
 
 
 
 
 


 
 
 
 
 
 
 
 
 
Follow me...







THULE
 GB Safety regulations
 D Sicherheits-Vorschriften
 F Instructions importantes
 NL Veiligheidsvoorschriften
 I Norme di sicurezza
 E Reglas de seguridad
 PT Normas de segurança
 S Säkerhetsföreskrifter
 FIN Turvallisuusohjeet
 EST Ohjeid eohjeid
 LAT Drošības noteikumi
 LTJ Saugumo taisyklės
 PL Wytyki bezpieczeństwa
 RU Инструкции по безопасности
 CZ Návod na montáž
 SK Bezpečnostné predpisy
 SLO Varnostni predpisi
 HR Pravila sigurnosti
 HU Biztonsági előírások
 GR Κανονισμοί Ασφαλείας
 TR Güvenlik kuralları
 中文 安全规范
 安全规范
 安全规范
 安全规范

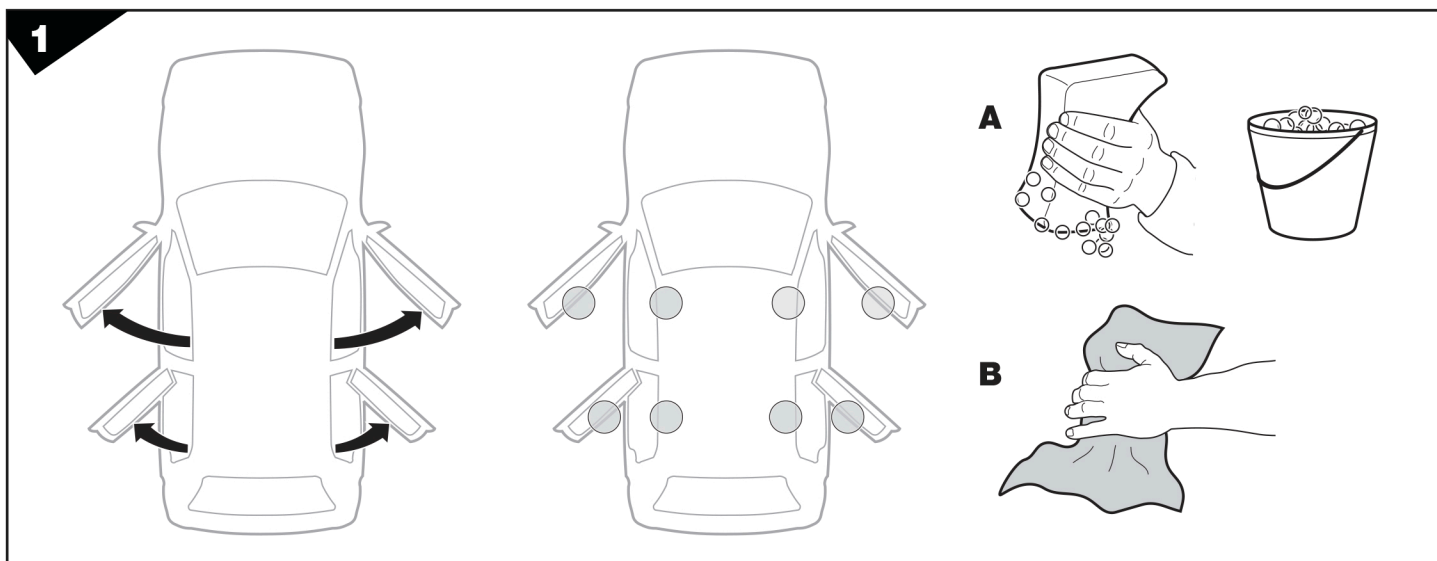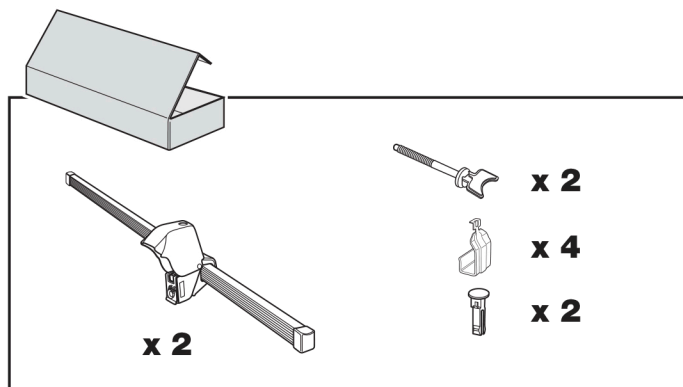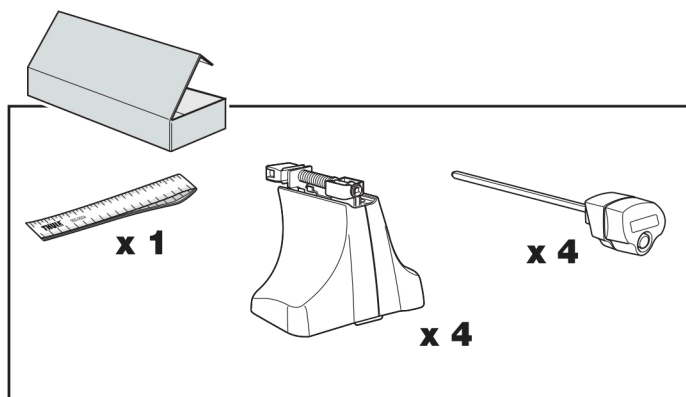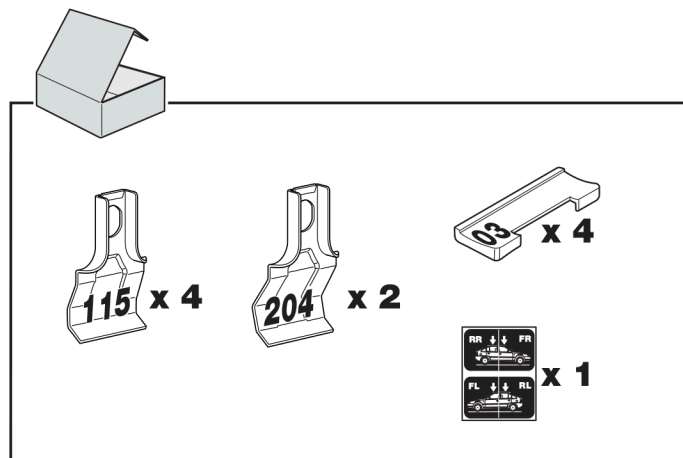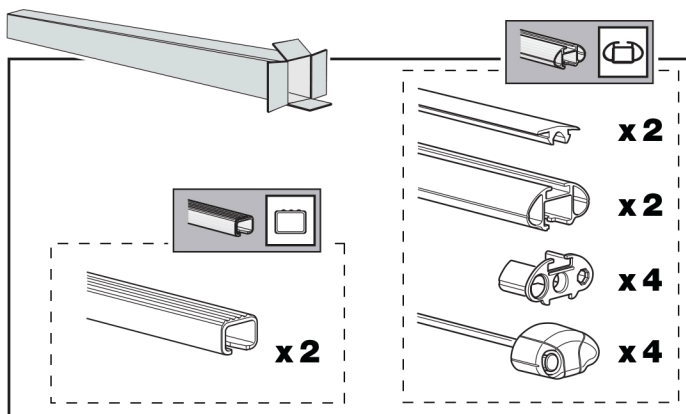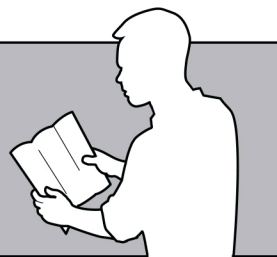


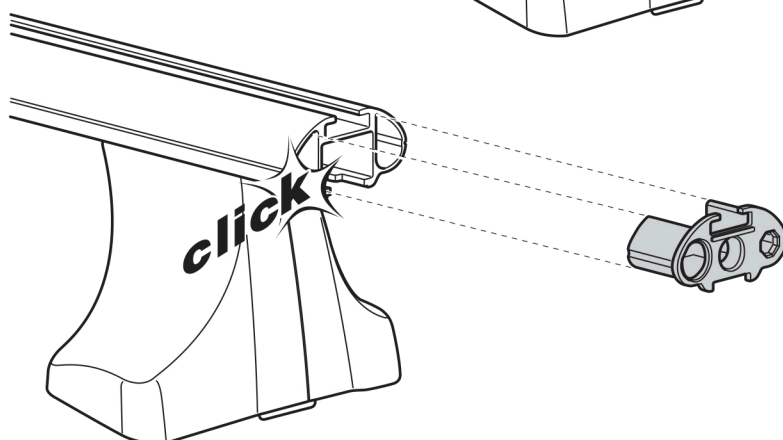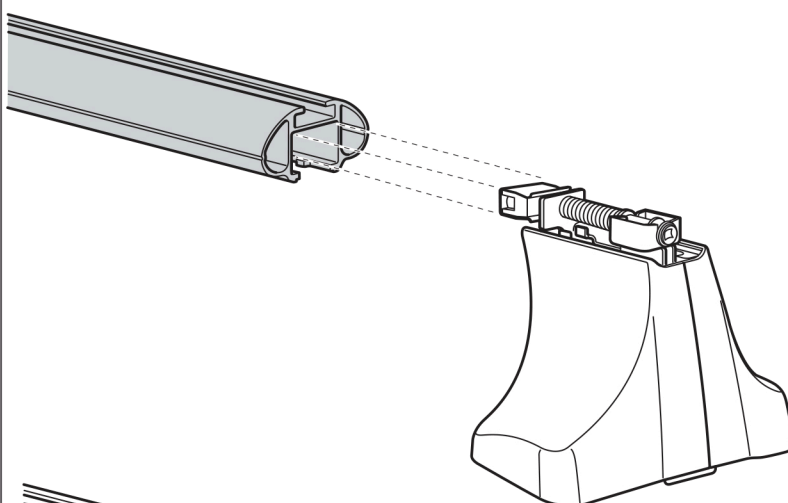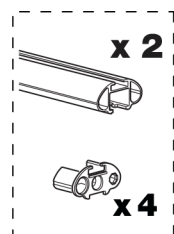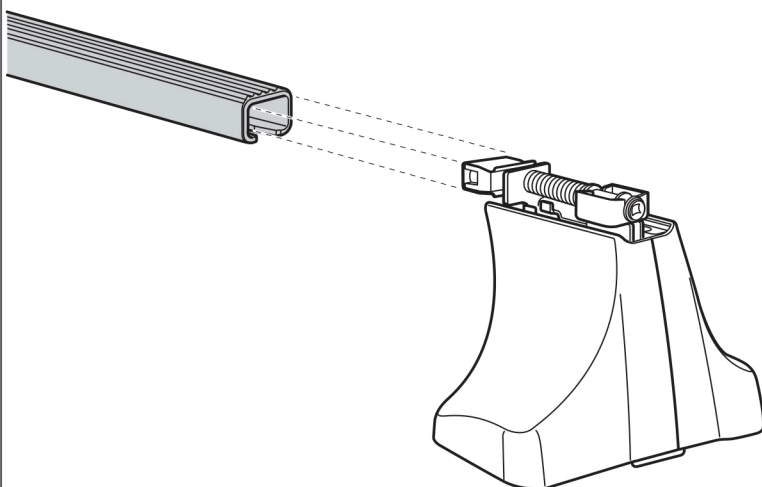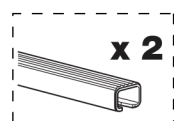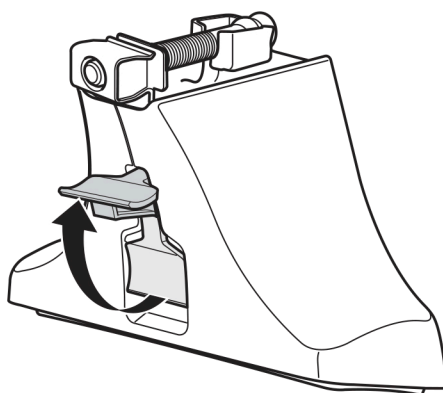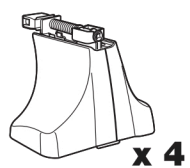

3





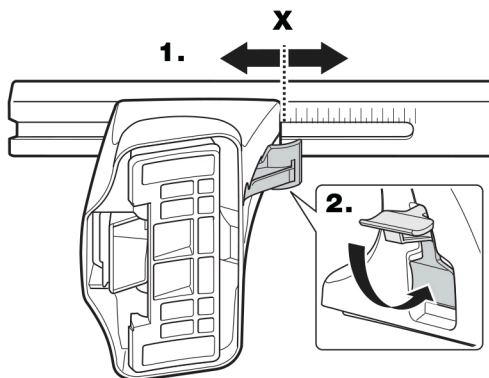 
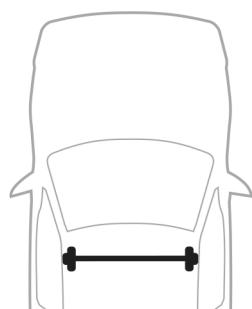 





	X
DAEWOO Lanos, 4-dr Sedan, 97-03	22,5
DAEWOO Lanos, 5-dr Hatchback, 97-03	22,5
DAEWOO Lanos, 3-dr Hatchback, 98-03	23
DAEWOO Leganza, 4-dr Sedan, 97-	32
DAEWOO Nubira, 4-dr Sedan, 97-99	27,5
DAEWOO Nubira II, 4-dr Sedan, 00-02	27,5

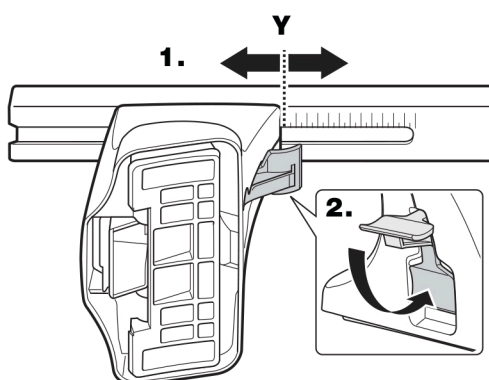 

	Y
DAEWOO Lanos, 4-dr Sedan, 97-03	22
DAEWOO Lanos, 5-dr Hatchback, 97-03	22
DAEWOO Lanos, 3-dr Hatchback, 98-03	21,5
DAEWOO Leganza, 4-dr Sedan, 97-	29
DAEWOO Nubira, 4-dr Sedan, 97-99	26,5
DAEWOO Nubira II, 4-dr Sedan, 00-02	26,5

         4

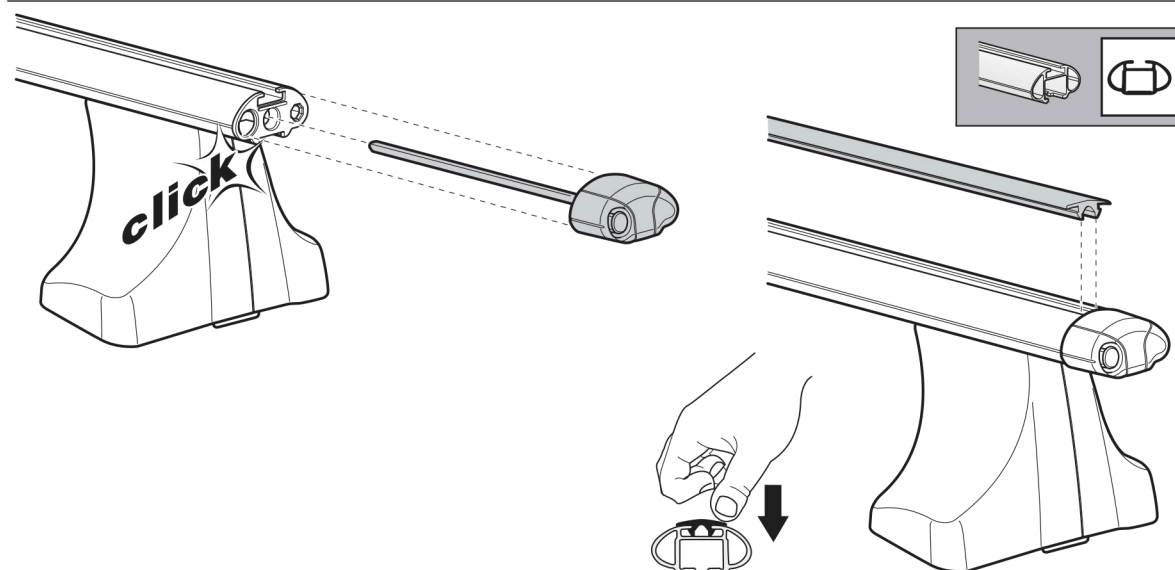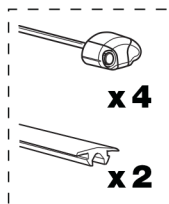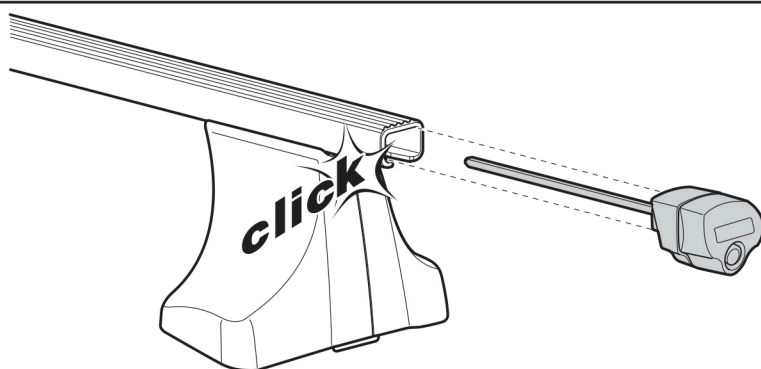


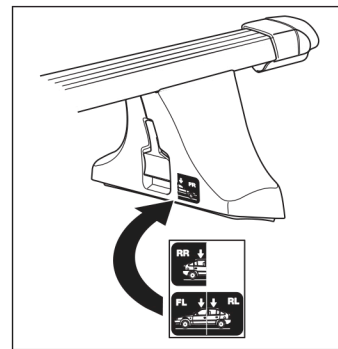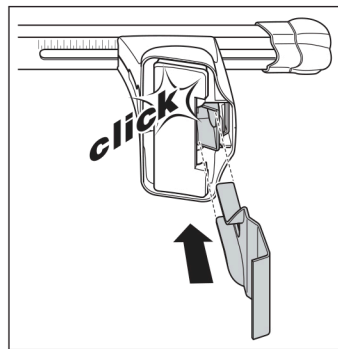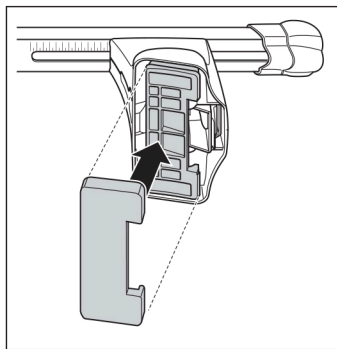

DAEWOO Lanos, 3-dr Hatchback, 98-03



 SRA 777

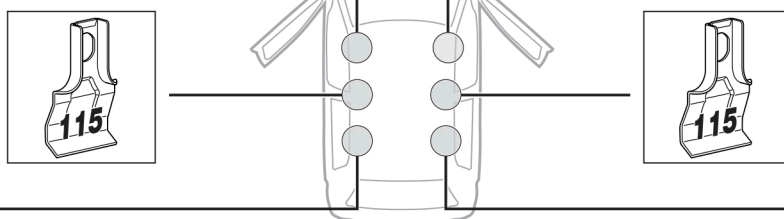


DAEWOO Lanos, 4-dr Sedan, 97-03


DAEWOO Lanos, 5-dr Hatchback, 97-03

DAEWOO Nubira, 4-dr Sedan, 97-99



 
DAEWOO Nubira II, 4-dr Sedan, 00-02

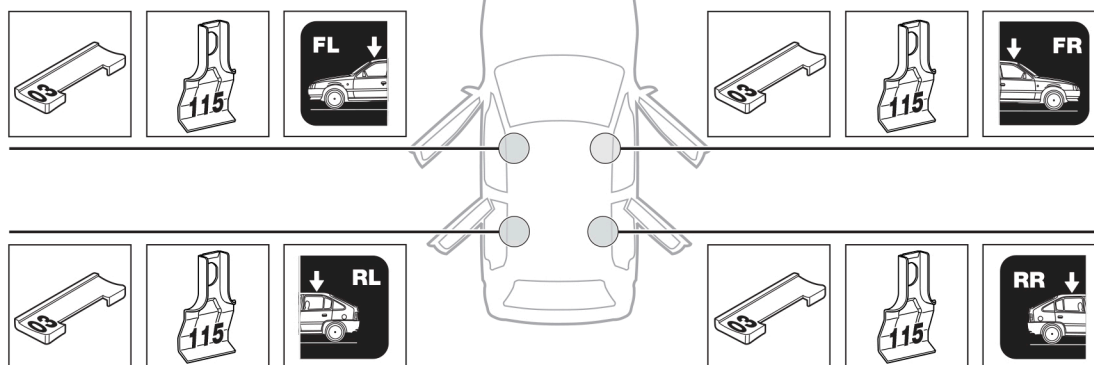

DAEWOO Leganza, 4-dr Sedan, 97-


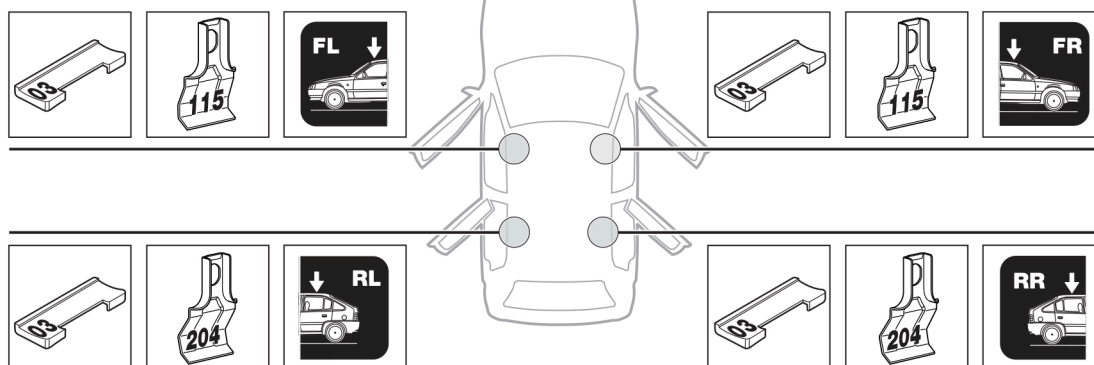 


   DAEWOO Lanos, 4-dr Sedan, 97-03
DAEWOO Lanos, 5-dr Hatchback, 97-03
DAEWOO Leganza, 4-dr Sedan, 97-
DAEWOO Nubira, 4-dr Sedan, 97-99
DAEWOO Nubira II, 4-dr Sedan, 00-02

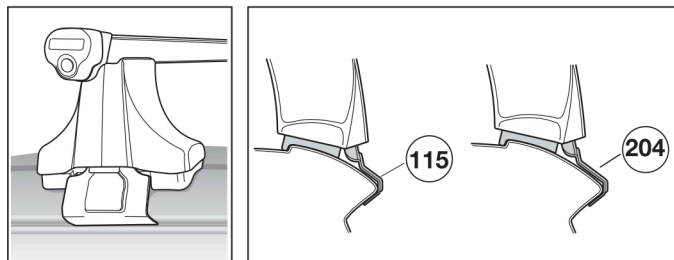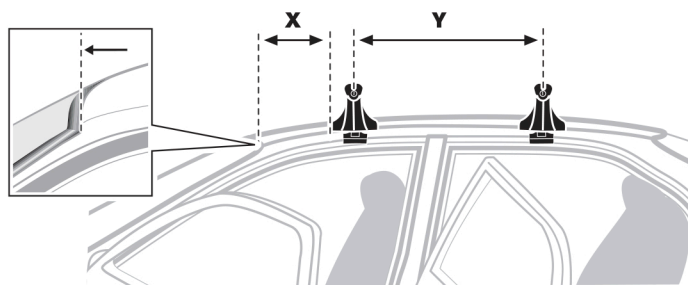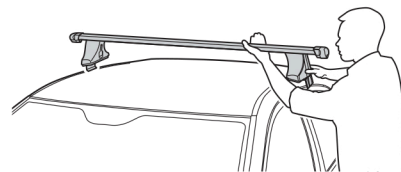




	X	Y
DAEWOO Lanos , 4-dr Sedan, 97-03	200 mm	600 mm
DAEWOO Lanos , 5-dr Hatchback, 97-03	200 mm	550 mm
DAEWOO Leganza , 4-dr Sedan, 97-	200 mm	650 mm
DAEWOO Nubira , 4-dr Sedan, 97-99	180 mm	650 mm
DAEWOO Nubira II , 4-dr Sedan, 00-02	180 mm	650 mm

  DAEWOO Lanos, 3-dr Hatchback, 98-03

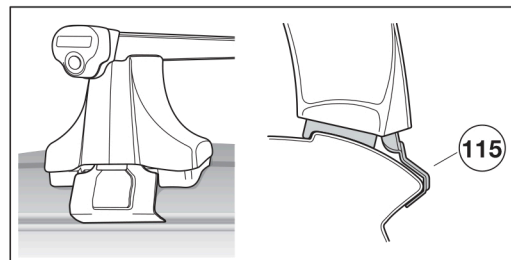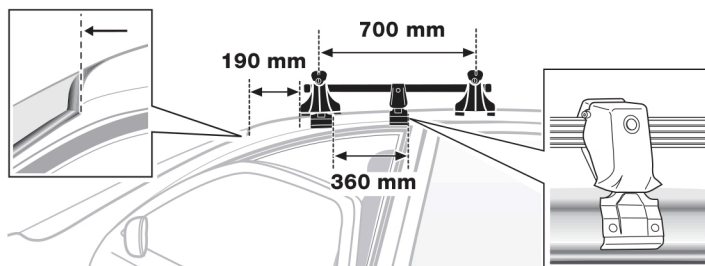

GB Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Serrare alternativamente
E Alternare il serraggio delle viti
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciet pamišus
LIT Užsukinėkite pakaitomis

   PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно
CZ Pokręťta bagażnika dokręcaj dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφίγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชั้นในแบบสลับ

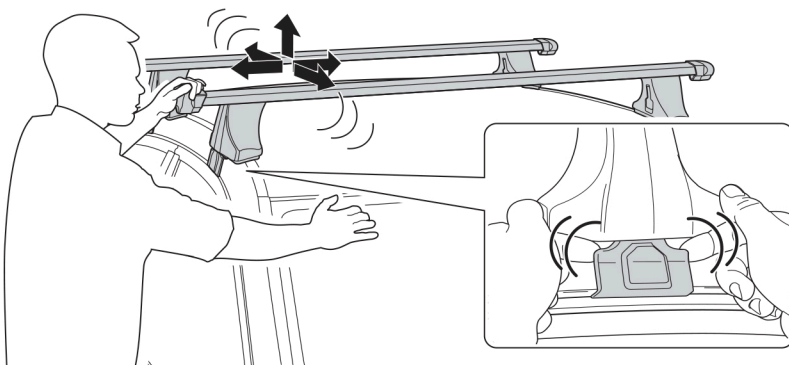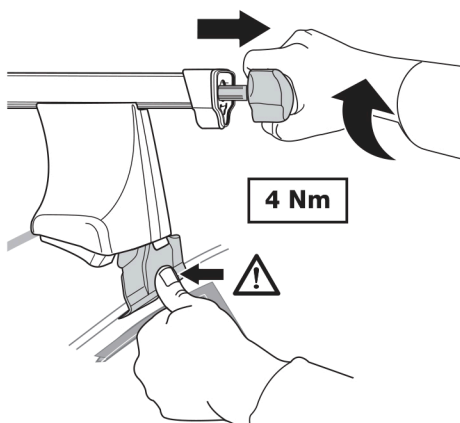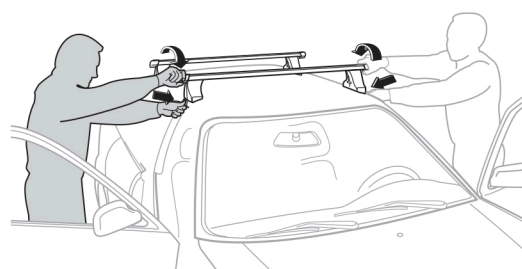

GB Removal	E Desmontaje	LAT Noņemšana	SK Demontáž	TR Sökme
D Demontieren	PT Remoção	LIT Nuėmimas	SLO Odstranjevanje	中文 拆除
F Démontage	S Demontering	PL Wymontowywanie	HR Uklanjanje	日本語 取り外し
NL Demontage	FIN Irrotus	RU Снятие	HU Leszerelés	한국어 분리
I Rimozione	EST Eemaldamine	CZ Odmontování	GR Αφαίρεση	ไทย การถอด

